

Sending DST Settings to Time Clock Using Remote Retriever


1. Open Remote Retriever



2. Enter your login credentials



3. Highlights all of your clocks in the list on the left. In the action section select Send configuration and click the Go button.

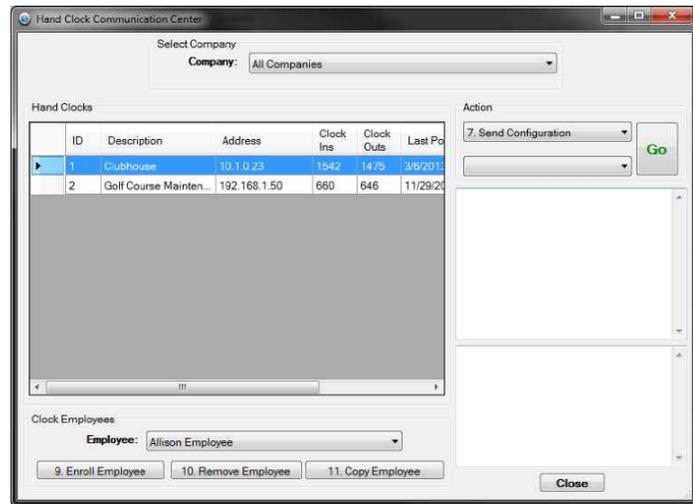

4. When this is complete close the application.